

Diesel Variant (10,000km or 6 months Service Interval, whichever comes first)

(Service A): 10,000 / 20,000 / 50,000 / 70,000 / 100,000 / 110,000 / 130,000 / 140,000 / 170,000 / 190,000 / 210,000km/ 220,000 km

(Service B): 30,000 / 60,000 / 90,000 / 150,000 / 180,000 / 230,000km

(Service C): 40,000 / 200,000 km

(Service D): 80,000 / 160,000 km

(Service E): 120,000 / 240,000 km

Page 1/2	Service A	Service B	Service C	Service D	Service E
Lubricant /Fluid Replacement					
Engine oil	√	√	√	√	√
Brake fluid			√	√	√
Parts Replacement					
Engine oil filter	√	√	√	√	√
Drain plug	√	√	√	√	√
Air filter element*		√	√	√	√
Cabin pollen filter	√	√	√	√	√
Fuel filter*		√			√
Engine					
Check engine compart leak & damage	√	√	√	√	√
Check engine coolant				√	
Check power steering fluid*	√	√	√	√	√
Check drive belt tension & condition	√	√	√	√	√
Check radiator hoses	√	√	√	√	√
Check vacuum hoses	√	√	√	√	√
Check engine & transmission mounting	√	√	√	√	√
Check windscreen washer tank/cap	√	√	√	√	√
Check manual Transmission fluid	√	√	√	√	√
Clean air filter housing	√	√	√	√	√
Clean engine with compressed air	√	√	√	√	√
Electrical					
Check battery condition (State of health)	√	√	√	√	√
Check all vehicle lighting (Interior/Exterior)	√	√	√	√	√
Check static cornering light & driving light assists	√	√	√	√	√
Check head light adjustment/ Basic setting	√	√	√	√	√
Check cigarette light/ Power socket	√	√	√	√	√
Check horn	√	√	√	√	√
Check power window	√	√	√	√	√
Check central locking system	√	√	√	√	√
Check aircon system	√	√	√	√	√
Check audio system (Radio)	√	√	√	√	√
Check sliding / Tilting / boot / Soft Roof (*)	√	√	√	√	√
Check seat adjustment	√	√	√	√	√
Check side mirrors	√	√	√	√	√
Check parking assistance	√	√	√	√	√
Check radiator fan	√	√	√	√	√

Page 1/2	Service A	Service B	Service C	Service D	Service E
Vehicle Exterior					
Check front/rear* wiper blade condition	√	√	√	√	√
Check windshield washer fluid	√	√	√	√	√
Check windshield washer nozzle/spray	√	√	√	√	√
Check windshield	√	√	√	√	√
Check fuel lid	√	√	√	√	√
Check door arrester	√	√	√	√	√
Check bonnet & boot catch hook	√	√	√	√	√
Check body corrosion	√	√	√	√	√
Check door seal condition	√	√	√	√	√
Clean sliding / panorama roof rail (*)	√	√	√	√	√
Tyres					
Check & reset tyre pressure all of wheel	√	√	√	√	√
Check thread depth, Condition & wear pattern	√	√	√	√	√
Check expiry of tyre mobility system (TMS)(*)	√	√	√	√	√
Check expiry of all tyre	√	√	√	√	√
Undercarriage					
Check leak & damage	√	√	√	√	√
Check gearbox, final drive & drive shaft	√	√	√	√	√
Check swivel joints, axle mountings, coupling rod bearings & anti-roll bar mounting	√	√	√	√	√
Check brake system	√	√	√	√	√
Check exhaust system	√	√	√	√	√
Check brake pads & disc condition	√	√	√	√	√
Check track rod ends for play & rubber boot	√	√	√	√	√
Check front & rear coil springs & rubber buffers	√	√	√	√	√
Check shock absorber	√	√	√	√	√
Check fuel lines & pipes	√	√	√	√	√
Check cross members	√	√	√	√	√
Check undercarriage sealant & cover	√	√	√	√	√
Additional service					
Reset of service interval display	√	√	√	√	√
On-board diagnostic test	√	√	√	√	√
Complete guided fault finding test	√	√	√	√	√
Reset system self-diagnosis	√	√	√	√	√
Software upgrade on control units	√	√	√	√	√
Road test/ Test drive	√	√	√	√	√
Complimentary Service					
Car wash	√	√	√	√	√
Interior vacuum	√	√	√	√	√

Legend:- * if applicable
Updated as at 24/02/2020